2645 Federal Signal Drive University Park, II 60484-3167 25500401 Rev. A0 0717

### **▲** WARNING

To properly install this light, you must have a good understanding of automotive electrical procedures and systems, along with proficiency in the installation and use of safety warning equipment.

## WIRING:

Illumination Lighthead - Single Color Edition	llumination	Lighthead	<ul> <li>Single</li> </ul>	Color	Edition:
---	-------------	-----------	----------------------------	-------	----------

To Vehicle -Ground BLACK To +VDC for activation (fuse rating @1A).....RED

Illumination Lighthead - Multi-Color Edition:

CAUTION: Activate only one color at a time.


NEVER activate both RED and WHITE wires together at the same time.

### Warning Lighthead:


To Vehicle -Ground......BLACK To +VDC for activation (fuse rating @1A)......RED

# INSTALLATION:

### **Bolt Mount**

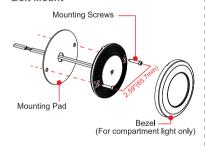

#### Adhesive Mount



(For compartment light only)

### Rubber Boot Mount

- 1. Create a Ø3.3" (84mm) cut-out on the selected mounting surface.
- 2. Insert the Rubber Boot onto the mounting surface.
- 3. Run the wiring through the Rubber Boot and make all necessary connections.
- 4. Insert the patient light and fix into the Rubber Boot. Note: Maximum sheet metal thickness @ 0.25" (6.35mm)

(Purchase Separately)

1-800-264-3578 **Customer Support:** Service Department: 1-800-433-9132 www.fedsig.com: 1-708-534-3400

